



LORA32 T-beam Meshtastic Case 1

When you receive your case there will be a bag inside with your included instructions. In order to open the case you should flex the top away from the case in the center. The top should flex enough to release the tab on the side. You can use a coin/screwdriver/fingernail to push the tab in a small amount if necessary but be very careful as this can break the tab off if you use too much force.

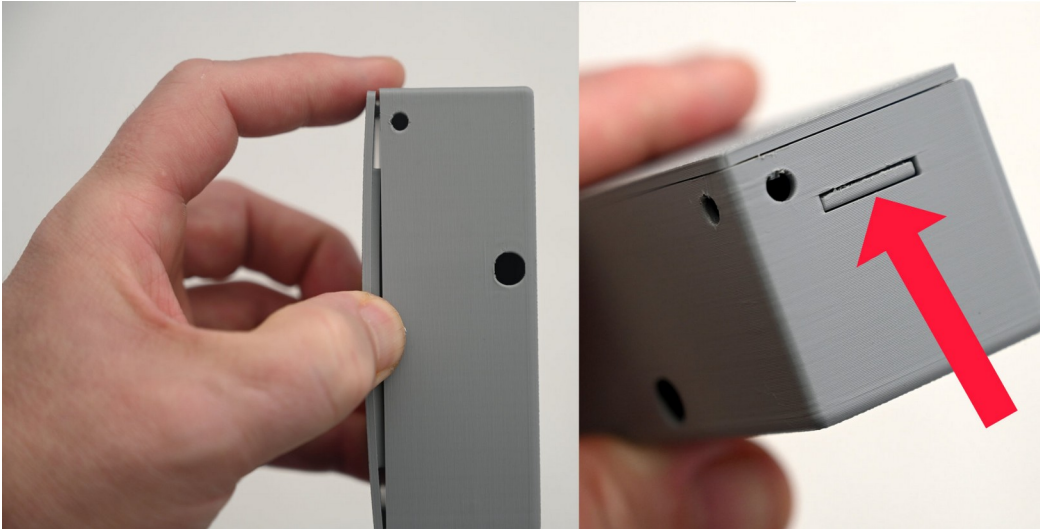


Inside the bag will be two small screws, a keyring, and a carabiner.

To install your board into the case you will need to insert the board at an angle, LCD down, antenna towards the antenna hole, making sure that the board goes under the two tabs in the case as shown below:

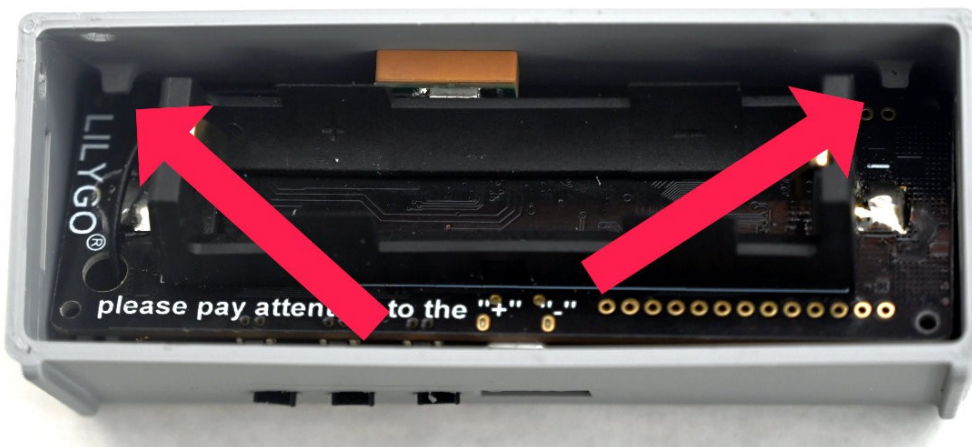

Now you will attempt to slide the board down into place. You need to watch to make sure the board goes over the buttons glued in the case. This may require a little finesse as the case is built to be as small as possible with the board installed. I find it helpful to pull on the antenna connector just a little with my fingernail. It WILL fit ;-)

Once the board is seated in the case, install the two screws into the two bottom screw holes (the top ones use the tabs instead of screws).

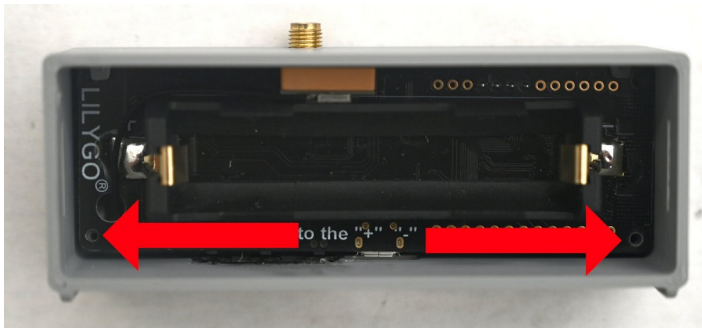


Install one screw just a few turns, do not tighten. Install the second screw and tighten just a little. If you over-tighten you will strip out the plastic threads and you only need it a little snug to hold the case and board together. Now snug the first screw.



To install the keyring make sure the top is off and use your fingernail, flathead screwdriver, or if you are VERY careful, a pocketknife to spread the metal apart and thread through the case as shown above.

Once you install your battery you can install the case cover by placing one tab into one of the slots of the case (1), slightly bending the lid to get the other tab to slide into the opposite slot (2) and it should click into place.

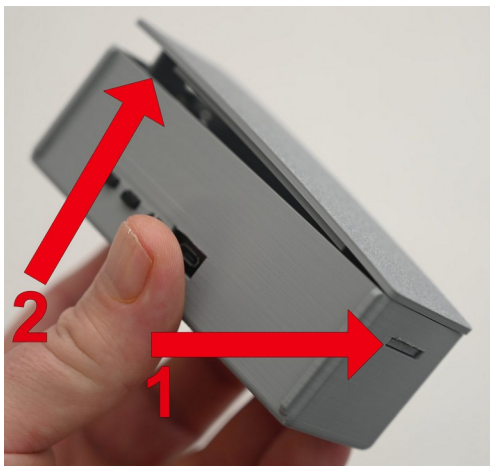

Now just screw on your antenna and you are done!